

DatOptic FireWire Internal Kit

IMPORTANT READ FIRST!!!

1. Your IDE device must be set to **MASTER** and not “SLAVE” or “CSEL”.

(Note: 1394IEEE is not bootable)

2. Make sure that all 40 pins on your IDE device and on the DatOptic FireWire Internal Kit are connected properly. *It is recommended that you put the DatOptic FireWire Internal Kit on first before installing your IDE device into your computer case.*

3. FireWire is only supported in Windows98SE/ME/2000/XP* and Mac OS 8.6 and up.

(Make sure your Windows XP supports FireWire and has all the latest Service Packs.)

4. Windows 98SE will need the Microsoft FireWire Patch from: www.daloptic.com/1394Win98.zip

5. Computers with motherboards that have the VIA chipset will need the updated 4in1 driver from www.viaarena.com.

If you do not follow these basic guidelines, you will most likely run into problems.

DatOptic Manual can be found at www.datoptic.com/fwintmanual.pdf