

DatOptic Dual FireWire Internal Kit

IMPORTANT READ FIRST!!!

1. The ATA/ATAPI device which is connected to the DatOptic Dual FireWire Internal Kit must be set to **MASTER**. (Note: 1394 is not bootable)
2. The second device which the IDE ribbon is connected will be set to **SLAVE**.
3. The DatOptic Dual FireWire Internal Kit should be connected to 2 ATA devices or 2 ATAPI devices. Do not mix and match ATA and ATAPI on the same Dual FireWire Internal Kit.
4. Windows 98SE will need the Microsoft FireWire Patch from:
www.daloptic.com/1394Win98.zip
5. Computers with motherboards that have the VIA chipset will need the updated 4in1 driver from www.viaarena.com.

If you do not follow these basic guidelines, you may and will run into problems.

Dual FireWire Internal Kit Manual Link: www.datoptic.com/ifc0kit.pdf