

# U-Raid-S Quick Guide

Content:


- 1) 2 FireWire 800 cables
- 2) 2 USB 2.0 Cable
- 3) 1 power cable
- 4) 1 bag of screws

## uRAID MANUAL


- 1) Remove the top cover of the uRAID-S unit.
- 2) Remove the fan panel from the case by unscrewing all the screw that is holding the fan panel down.



- 3) Place the hard drive in position with the hard drive holes and tighten the hard drive with the available screws.

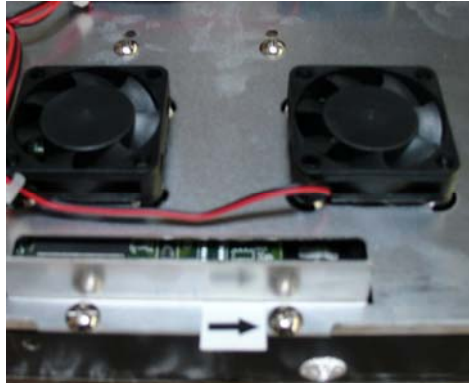

- 4) Connect the SATA cable and the power cable to the hard drives. Set your hard drives configure to Mirror, Spanned, Raid 0 or JBOD by the changing the jumper as follow on both boards.

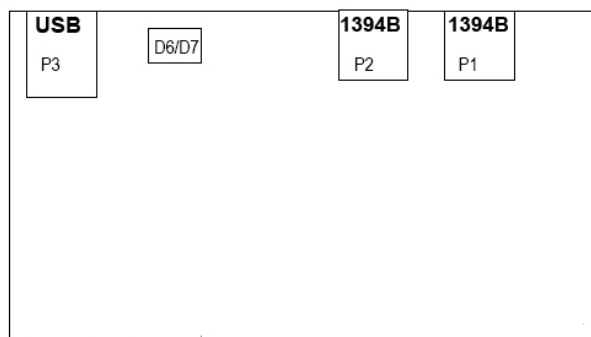


### Bridge Board Jumper Setting

D6 - Pins	D7 - Pins	Mode
Open	Open	Mirror – RAID 1 ( <b>NEW</b> )
Open	Close	Spanning – Combine Two Drive as One
Close	Open	Stripping – RAID 0
Close	Close	Dual Drive Mode


- 5) Once all hard drives are connected to the SATA cable, close the top cover and turn on the power.
- 6) Connect the FireWire or USB 2.0 cable from the back of the uRAID-S to a FireWire port on the computer.

### Formatting Hard Drives


- 1) Open Disk management and format your uRAID-S hard drive  
Right click on My Computer - Select Manage.

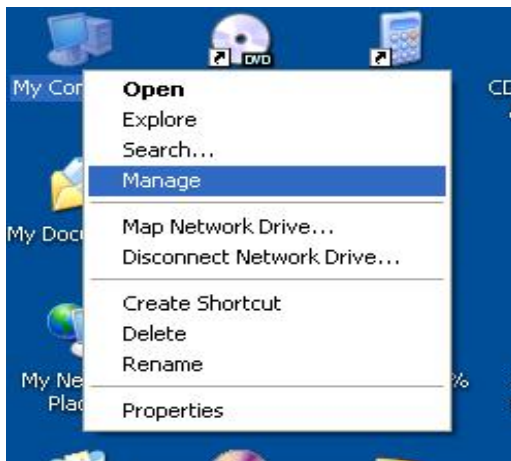

Select Disk management, this opens the Disk Management console

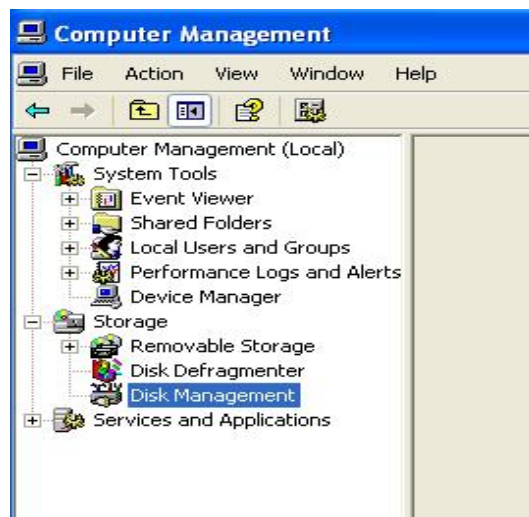

Initial and format uRAID-S HDD.

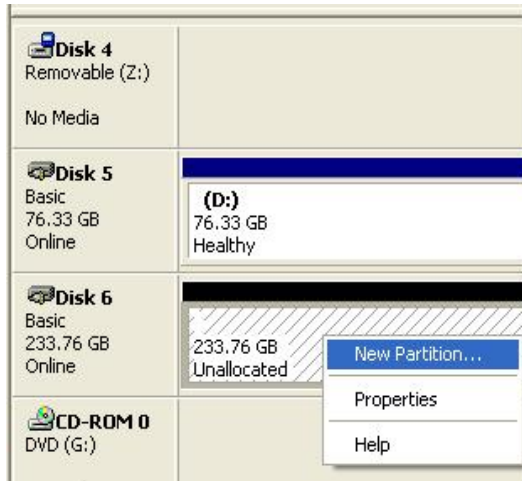

**For Mac user:** Please use Disk Utility or Initialize the hard drive when your OS detect the uRAID-S.